

## INSTALLATION MANUAL

Thank you for buying a set of Rebelmoto Bar Ends.






### Important!

Do not use any tools or any form of excessive force during the installation. Doing so will most likely damage the bar ends.

### Installation

The rebel bar ends can be used on bars with an inner diameter of 14–21mm. Included in the box there are three different sizes of rubber bushings, 14mm, 17mm and 21mm. Use the size that fits your bars best.

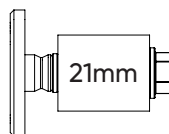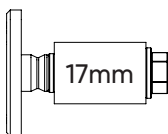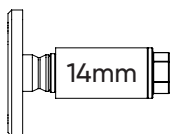

Slide the bar end into the bar and turn it clockwise by hand, until tightened. It might be necessary to tighten the nut on the bar end until the bushing as expanded enough. Once in place, slightly unscrew the bar end to the point where you can pull out the bar end from the bar. Now place the bar end so that the “rebelmoto” logo points to the right. Slide the bar end back into the bar and turn the bar end another 3/4 rotation clockwise, so that the rebelmoto logo is at the top. The bar end should now be secure in place with the logo being the right way up.

Enjoy your new Rebelmoto custom motorcycle parts.